


Assembly of HT125701 oval tub



Picture shows parts

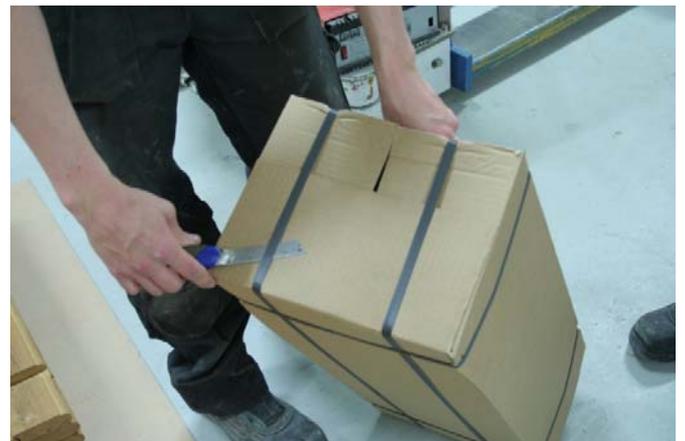

Open the boxes by cutting only the longer straps, leave the others because the boxes will serve as an assembly table.



Bottom is placed on two boxes. With the assembly line facing upwards.



Begin with the first stave at the marked position. See picture 1 on the last page for more information.

NOTE! It's important that the staves follow the marked line.



WRONG! The staves are too far away from the line, adjust the staves longer inwards.



WRONG! The staves are crossing the line!



CORRECT! The staves are following the line without crossing it.



Attach the first stave, use the staves from **group 1**



After five staves switch to **stave nr. 2**



After eight staves from **group 7** switch to **stave 6**.



Now is also a good time to assemble the drainage valve. Apply silicone on the threads.



Smear out the silicone on the threads with a finger.



Use the included tool to screw the drainage valve in place.



Attach four staves from **group 4**, the last stave should now line up with the line that marks the center.



Attach four more staves and switch to **stave nr 5**.




Attach eight more stave from **group 7**, this means all staves from **group 7** have been used. **Attach stave 3.**



Attach the rest of the staves from group 1, when you have the last stave remaining, knock the first and second last staves outwards.



Insert the last stave from above and tap it into its notch with the help of a rubber mallet. All staves are now assembled.

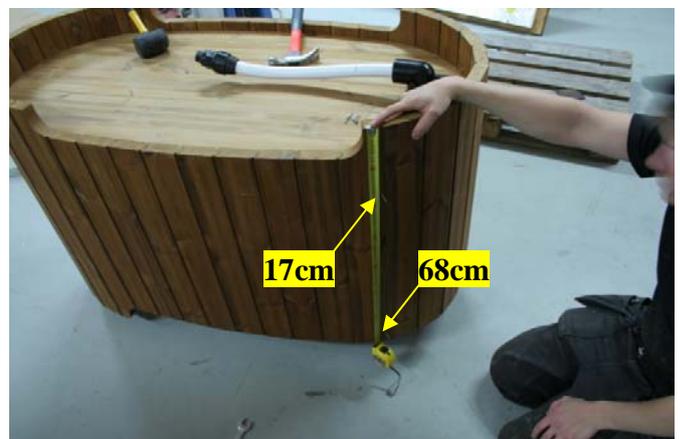


Attach the support nails in every corner of the tub, measure 17 and 68 cm from the bottom. Measure from the longer staves.




Place the stainless steel bands on the nails and tighten the bolts until the distance is about 40 mm. When the bolt is being tightened, tap the sides occasionally with a rubber mallet to adjust the staves.



Attach the "feet" as the picture shows.

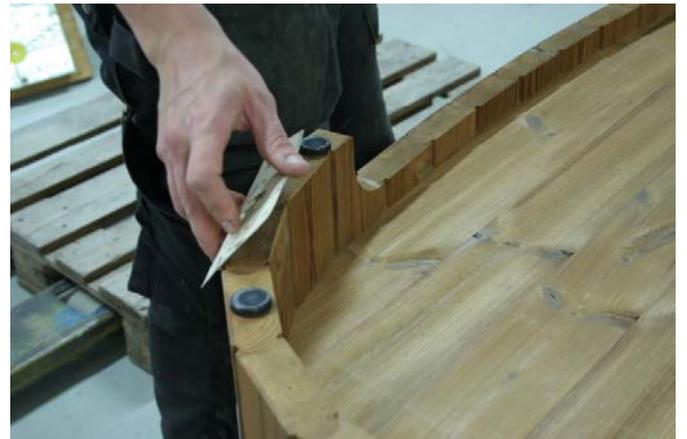

Bevel the edges on the lower side.

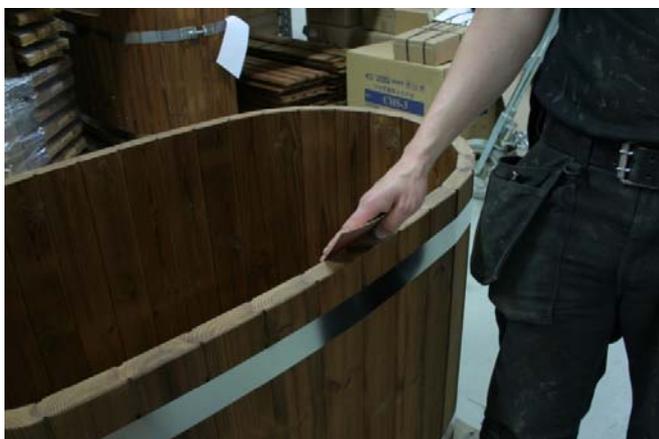

Also bevel the upper edges of the tub.



Assembly of benches. Support pieces for the bench are shown in order of assembly.



Place the first support piece at the fifth stave as the arrow indicates. See picture 2 on the last page for more information.



Align the first piece as the arrow indicates.



Fasten all the pieces in the side as the picture shows. **NOTE!** The first and last piece are not identical, see picture. Repeat the procedure for the other side.




Now place the first bench. The included "calibration pieces" help align the bench correctly. Check that the bench is at a 90° angle with the base.



Predrill with a 3mm drill and screw the bench in place with 4 screws, **don't forget to use the included washers!**



Continue with the next bench, use the pieces as the picture shows and repeat earlier steps.

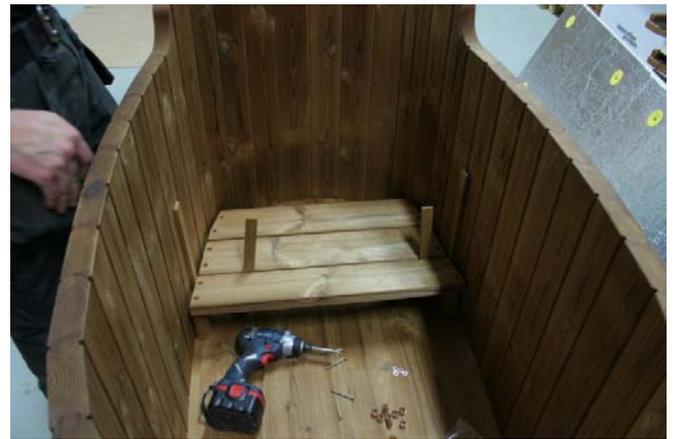

Attach the last bench in the same way.




After all the benches are assembled, plug the hole with the included plastic plugs.



Finally attach the grill for the drainage hole.

Your tub is now assembled and ready for use.

1

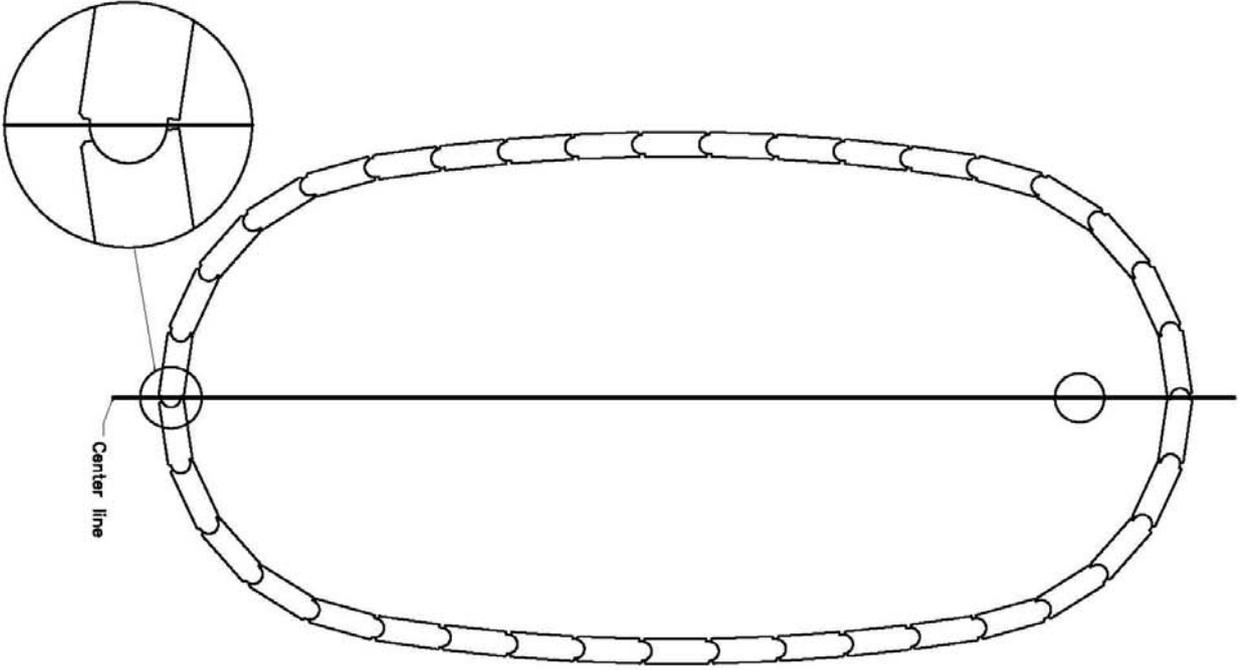

2

